

#### **FIVE YEAR PRODUCT WARRANTY**

---

This product has been thoroughly tested and is free from defects in material and workmanship. This warranty is expressly limited to product repair, modification, or replacement, at the sole discretion of the manufacturer. The maximum liability for any aspect of this warranty will be limited to an amount not exceeding the original product purchase price.

This warranty is contingent upon proper use of the product in the application for which it is intended and does not cover any product that has been modified, mis-used, neglected or subjected to unusual physical stress. The manufacturer will not repair or replace products that fail solely because their estimated 'life' has expired.

The defective product must be returned to the manufacturer. All shipping costs/ shall be the responsibility of the purchaser. State and local laws may apply.

You will need a Return Merchandise Authorization (RMA) number before you return the product. Please contact the Product Support Center at the telephone number below for assistance in getting an RMA number.

#### **Disclaimer**

Except as provided herein, there are no express or implied warranties of merchantability or fitness for a particular purpose. Under no circumstances will the manufacturer be liable in any way for any damages, including but not limited to lost revenue, lost wages, or any other incidental or consequential damages arising from the use of or inability to use this product.

The warranty set forth above is exclusive and no other warranty, whether written or oral, is expressed or implied.

The manufacturer reserves the right to change specifications of hardware, software and instructions without notice.

This warranty does not extend to batteries. If batteries are supplied with the product, it is as a convenience only, and as such, are covered by the battery manufacturer's warranty.

#### **100% COMPATIBLE GUARANTEE**

---

This product is 100% guaranteed compatible with OEM machines for which they are designed.

#### **TECHNICAL SUPPORT**

---

Technical assistance can be provided with installation of this product. Any phone/e-mail charges are the responsibility of the purchaser.

#### **CONTACTING THE PRODUCT SUPPORT CENTER**

---

For Technical Support or Warranty information you can contact the Product Support Center at:

- 858-391-1234 (9:00AM to 5:00PM PST Mon-Fri)

# *e***Film Reader-32**

## SecureDigital/MultiMediaCard USB 1.1 Reader/Writer

---

### Quick Install Guide

---

*For use with Windows XP / 2000 / ME / 98 / 98SE and  
Apple Mac OS 9 / X*



## System Requirements

---

### IBM compatible desktop or laptop PC

Windows XP / 2000 / ME / 98 / 98 SE

Available USB port

### Apple Macintosh desktop or laptop

Mac OS 9 / X (Jaguar or Panther)

Available USB port

### Driver Installation

---

Driver installation is not necessary for Windows XP, 2000, ME or Mac OS 9 and X. The reader will use Mass Storage drivers which are built into the Operating Systems. Windows 98/98 SE drivers can be downloaded from: [www.delkin.com/support/drivers.htm](http://www.delkin.com/support/drivers.htm)

Download the driver and double click the icon to expand the driver file. The default location will be the C:\Windows\Temp folder. Plugging the reader in (see Hardware Installation below) will activate the Found New Hardware wizard. When prompted, browse to the Reader-32 driver folder and follow the instructions in any subsequent dialog screens.

### Hardware Installation

---

Insert the USB plug of the reader directly into the USB port of your computer (See Figure 1). Or, attach the reader to the included USB cable and connect the cable plug to the USB port of you computer. Some computer cable configurations may interfere with direct connection. When directly connecting on laptops, make sure the USB plug is inserted completely. Some laptops have recessed USB plugs which may interfere with the connection.

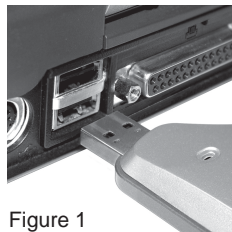


Figure 1

## Inserting / Removing a Card

---

Position the SecureDigital or MultiMediaCard with the gold contact side down and the notched end toward the reader. Insert it gently but firmly into the slot (See Figure 2). Inserting a card at an improper angle or forcing it may result in damage to the card and/or reader. When a card is inserted, the LED will light up and stay on.

While the card is being accessed, such as during a transfer operation, the reader's LED will blink on and off rapidly. Never remove a card or disconnect the reader when the LED is blinking. Doing so could result in lost or corrupt files and possibly cause irreparable damage to the card.

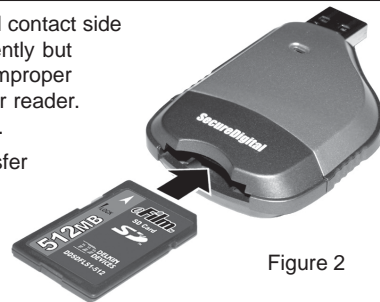


Figure 2

Before removing a card, close any open applications, including open windows. In Windows, right-click the Removable Disk icon and select Eject. On the Mac, drag the disk icon to the Trash or use the Put Away command. Then, simply pull the card from the reader.

### Basic Operation

---

The reader can be used to copy or transfer virtually any file type, such as pictures, text documents or MP3's, to or from a SecureDigital or MultiMediaCard.

On **Windows** systems, the reader will appear as a Removable Disk drive icon in My Computer. Double-click on the icon and simply "drag and drop" or "copy and paste" folders or files to a desired location.

On **Macintosh** systems, an inserted card will appear as a disk icon on the desktop. Double-click on the icon then select a file or folder. While holding down the Option key, simply "drag and drop" to a desired location. Note: The disk icon will only appear when an SD/MMC card is inserted.