


SIDEPAK™ AM510 Personal Aerosol Monitor Theory of Operation

The SIDEPAK Model AM510 Personal Aerosol Monitor uses light scattering technology to determine mass concentration in real-time. An aerosol sample is drawn into the sensing chamber in a continuous stream. One section of the aerosol stream is illuminated with a small beam of laser light. Particles in the aerosol stream scatter light in all directions. A lens at 90° to both the aerosol stream and laser beam collects some of the scattered light and focuses it onto a photodetector. The detection circuitry converts the light into a voltage. This voltage is proportional to the amount of light scattered which is, in-turn, proportional to the mass concentration of the aerosol. The voltage is read by the processor and multiplied by an internal calibration constant to yield mass concentration. The internal calibration constant is determined from the ratio of the voltage response of the SIDEPAK AM510 to the known mass concentration of the test aerosol.

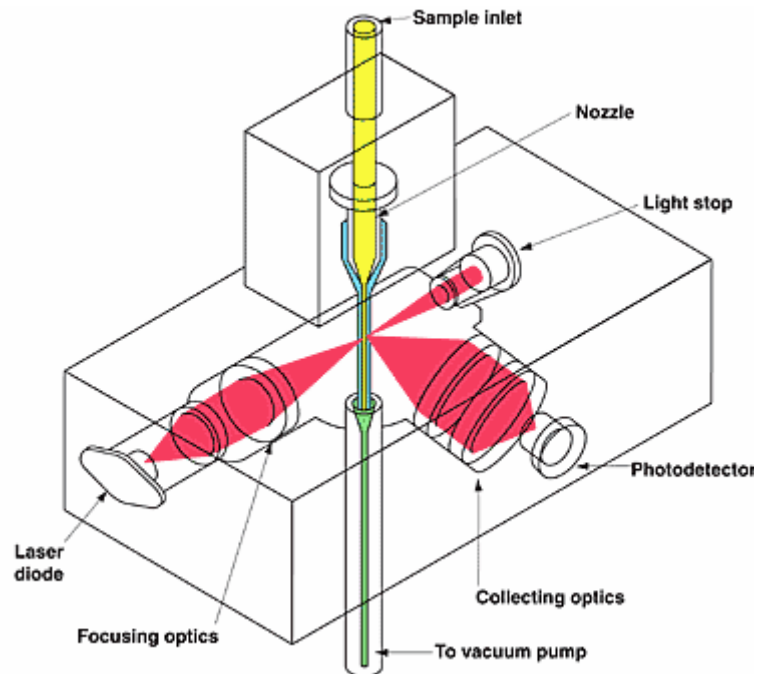

Light scattering-type aerosol monitors respond linearly to the aerosol mass concentration. That is, for a monodisperse aerosol, one particle scatters a fixed amount of light; two particles scatter twice as much light; and 10 particles scatter 10 times as much light. The scattered light is dependent upon particle size. This dependence is most dramatic for particles with diameters (D) less than one third the wavelength of the laser ($\sim 0.25 \mu\text{m}$). For these small particles, the scattered light decreases as a function of the sixth power of the diameter (D^6). The laser diode used by the SIDEPAK AM510 has a wavelength of 670 nanometers (nm) which limits the smallest detectable particle to about $0.1 \mu\text{m}$. The scattered light is also dependent upon the index of refraction and light absorbing characteristics of the particles. Light scattering from particles can be modeled using a complex set of equations using Mie light scattering theory. The light scattering dependence on particle size is characteristic of all aerosol monitors of this type. The effect of particle size dependence on the mass concentration computed by the SIDEPAK AM510 is greatest for monodisperse aerosols. If you need very accurate mass concentration readings and use the SIDEPAK AM510 in an environment where a specific aerosol type predominates, you can recalibrate the unit for that aerosol.

The SIDEPAK AM510 is calibrated against a gravimetric reference using the respirable fraction of standard ISO 12103-1, A1 test dust (Arizona Test Dust). This test dust has a wide size distribution covering the entire size range of the SIDEPAK AM510 and is representative of a wide variety of ambient aerosols. The wide range of particle sizes averages the effect of particle size dependence on the measured signal.

The sensing volume of the SIDEPAK AM510 is constant and is defined by the intersection of the aerosol stream and the laser beam. Mass is determined from the intensity of light scattered by the aerosol within the fixed sensing volume. Since the sensing volume is known, the information can be easily converted by the SIDEPAK AM510 microprocessor to units of mass per unit volume (mg/m^3).



TSI Incorporated

Headquarters—Tel: +1 651 490 2811 **Toll Free:** 1 800 874 2811 **E-mail:** answers@tsi.com

UK Tel: +44 1494 459200 **E-mail:** tsiuk@tsi.com **France** Tel: +33 491 95 21 90 **E-mail:** tsifrance@tsi.com

Germany Tel: +49 241 523030 **E-mail:** tsigmbh@tsi.com **Sweden** Tel: +46 8 595 13230 **E-mail:** tsiab@tsi.com

India Tel: +91 80 41132470 **E-mail:** tsi-india@tsi.com **China** Tel: +86 10 8260 1595 **E-mail:** tsibeijing@tsi.com

